


Usage policy (NO₂ 1000 ppm balance N₂):

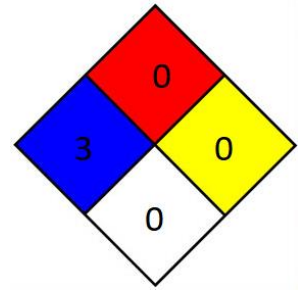

- The gas can be used for device characterization only with prior permission.
- Use suitable hand truck to move the cylinder.
- Keep the gas in well-ventilated area.
- Keep valve protection cap on while the cylinder is not in use.
- The gas can be purged only inside a sealed chamber with proper exhaust system.
- The place contains the cylinder as well as the lab to perform measurements should have NO₂ detector.
- Before purging the NO₂ make sure that the exhaust system is working properly.
- If the NO₂ detector alarmed, leave the lab immediately and report that to facility.